

FDP Fire Detection Panel

User Manual

Safety Information

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.



FDP Fire Detection Panel

User Manual

Fire detection panel overview




Read these instructions carefully before you use the fire detection panel. Keep this manual next to the fire detection panel.



How to navigate in the menu:

To open the menu, turn the key clockwise and push the Wheel button.

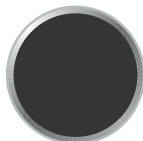

To move up and down in the menu, turn the Selection wheel.



To select a menu item, push the Wheel button.
To go back, push Escape.

FDP Fire Detection Panel

User Manual

In case of fire alarm



These operations are only for firemen.




Disable alarms only temporarily. To enable alarms, see How to disable/enable functions.



For more information, contact your Schneider Electric supplier.


To Reset to normal operation:

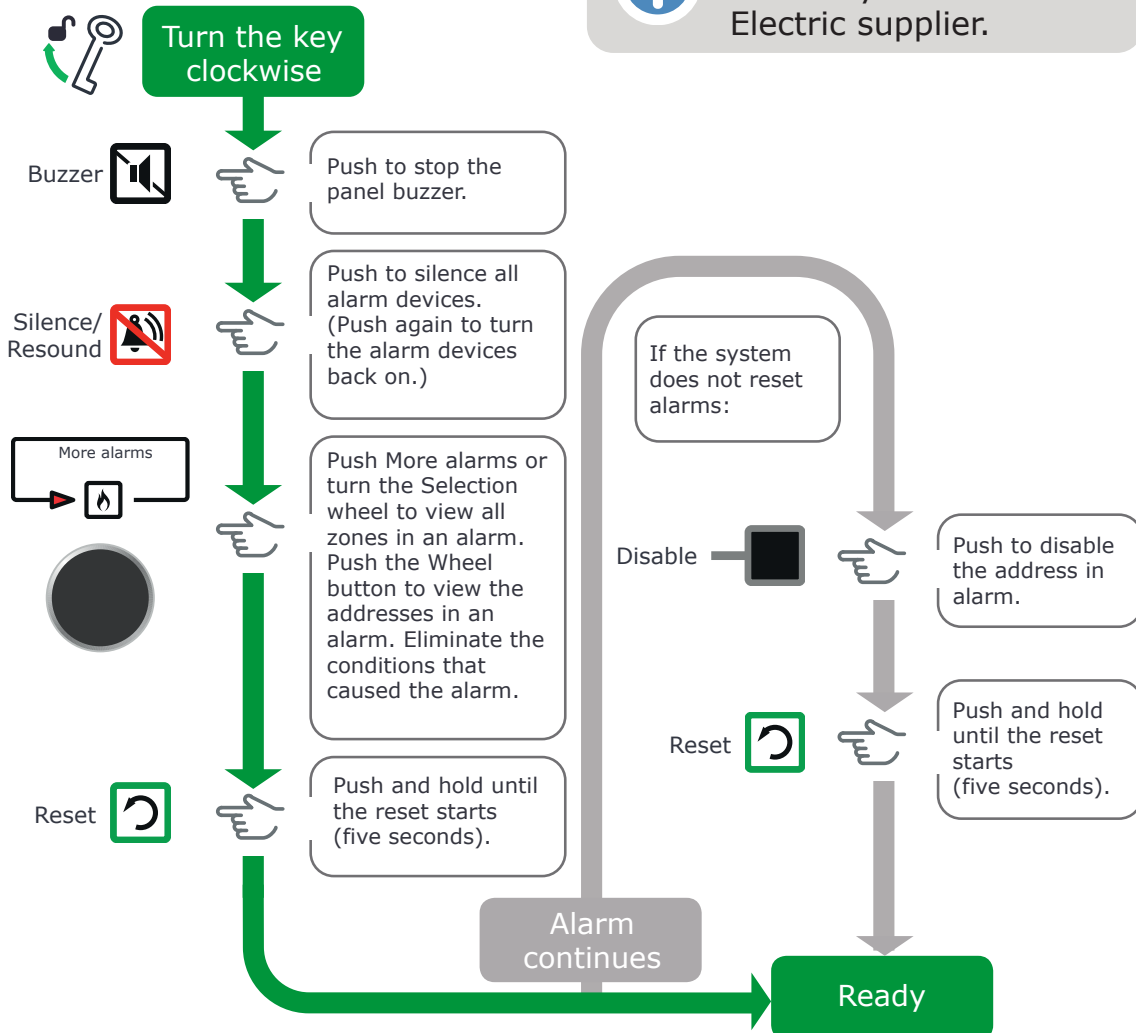

FDP Fire Detection Panel

User Manual

In case of prealarm

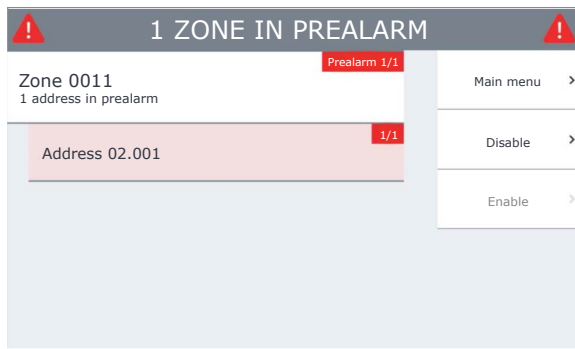


Disable alarms only temporarily. To enable alarms, see How to disable/enable functions.



For more information, contact your Schneider Electric supplier.


To Reset to normal operation:

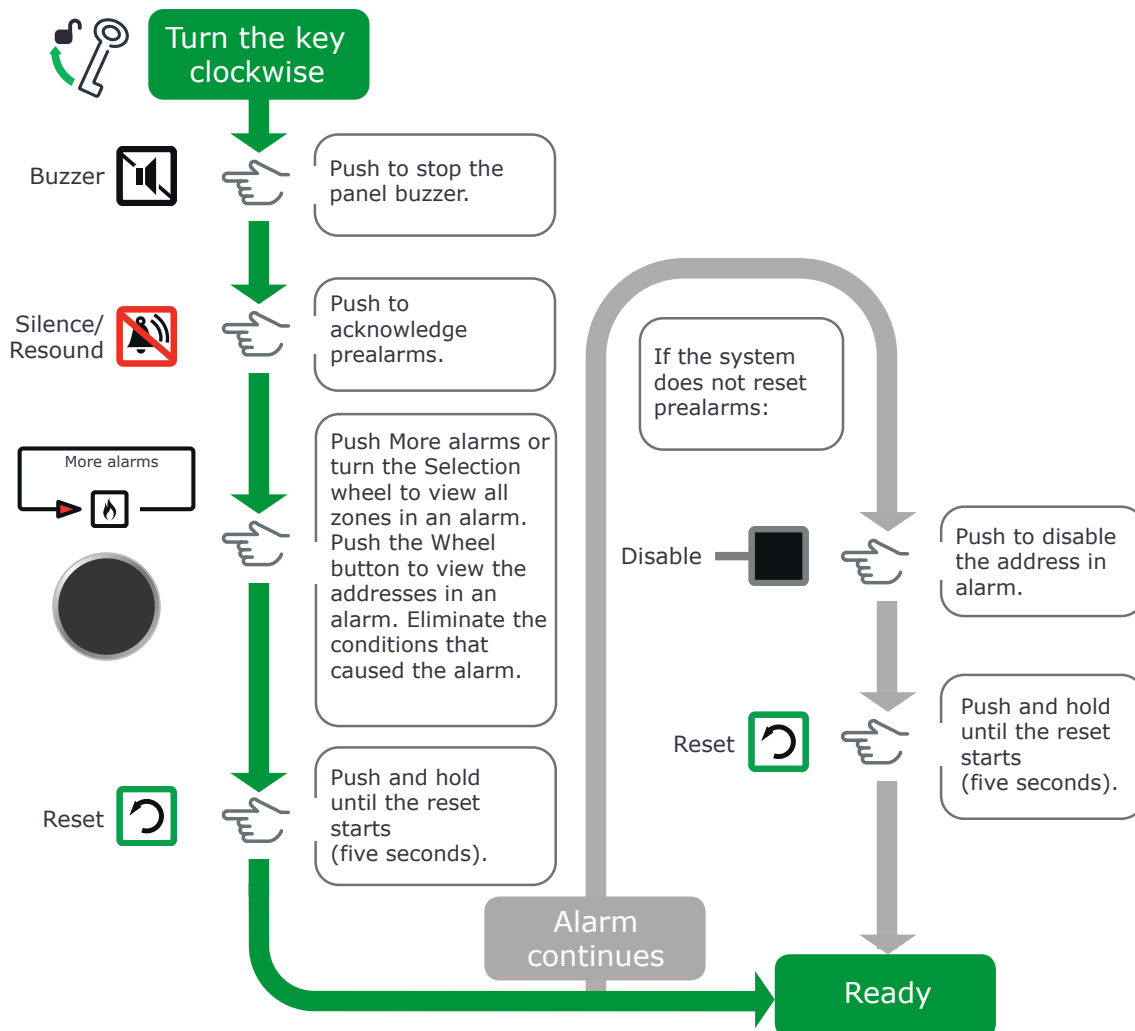

FDP Fire Detection Panel

User Manual

Coincidence alarm

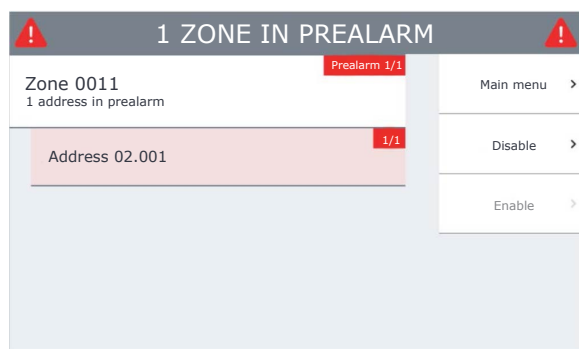


Disable alarms only temporarily. To enable alarms, see How to disable/enable functions.



For more information, contact your Schneider Electric supplier.

After a coincidence detector activates prealarm:

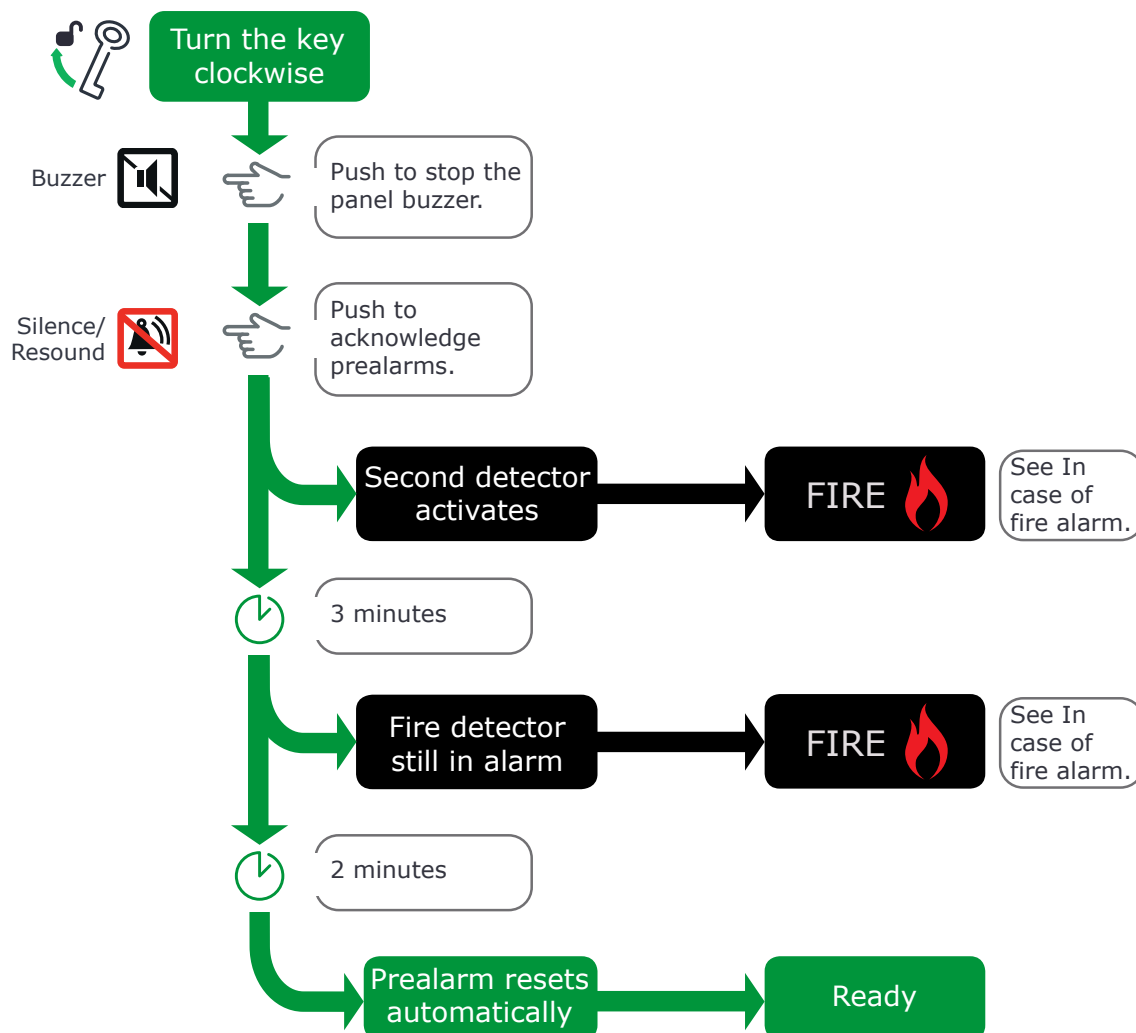

FDP Fire Detection Panel

User Manual

Delayed alarm




Disable alarms only temporarily. To enable alarms, see How to disable/enable functions.



For more information, contact your Schneider Electric supplier.


After a detector activates a delayed alarm:

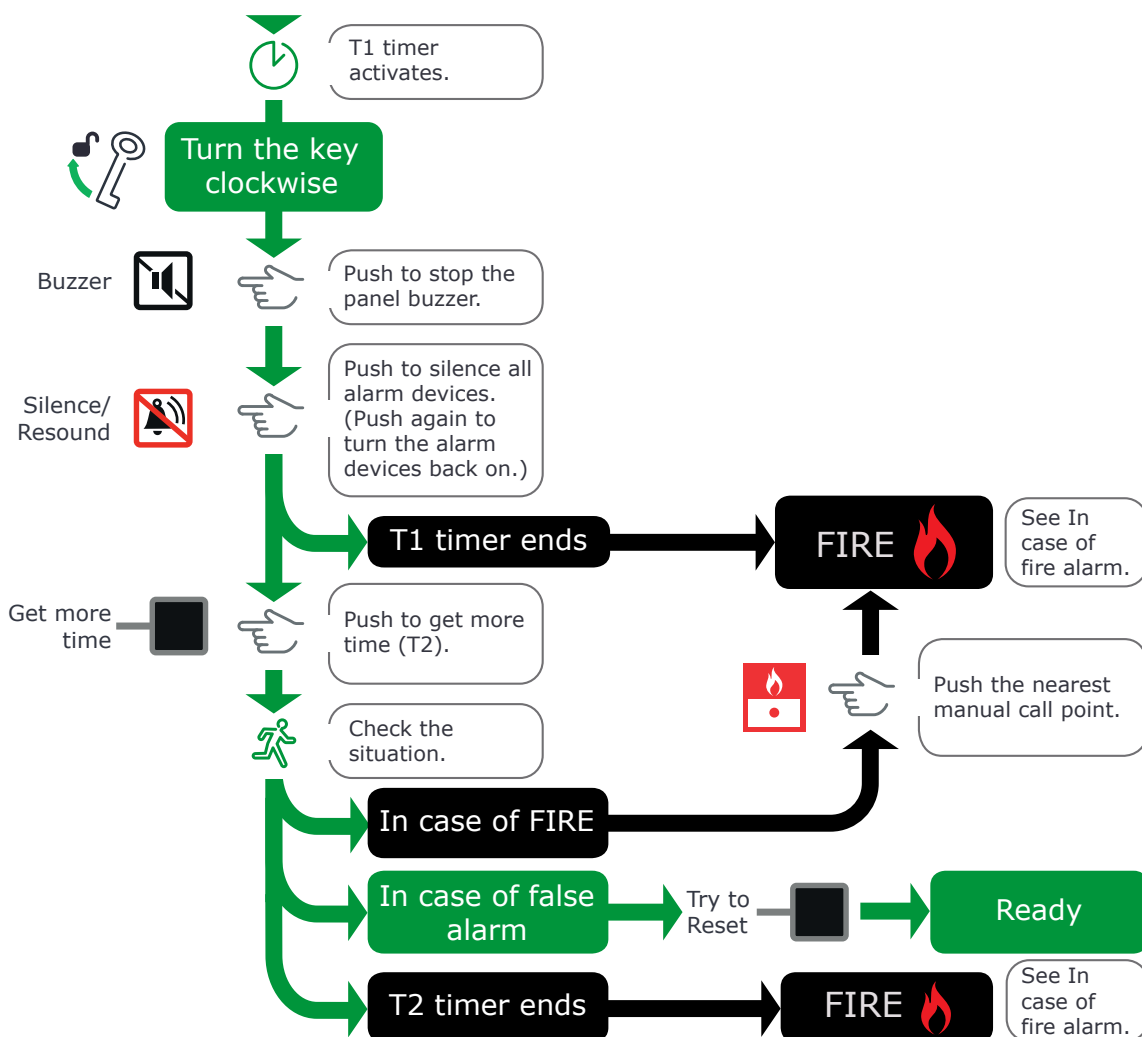

FDP Fire Detection Panel

User Manual

In case of fault or maintenance indication

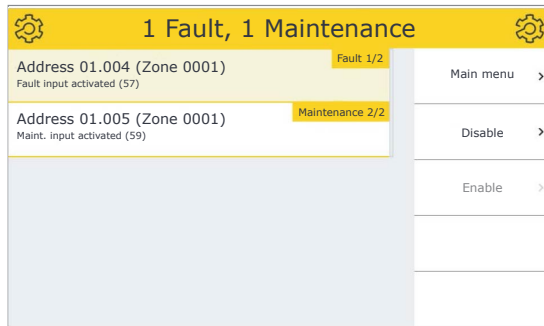


Disable alarms only temporarily. To enable alarms, see How to disable/enable functions.



For more information, contact your Schneider Electric supplier.

To Reset to normal operation:

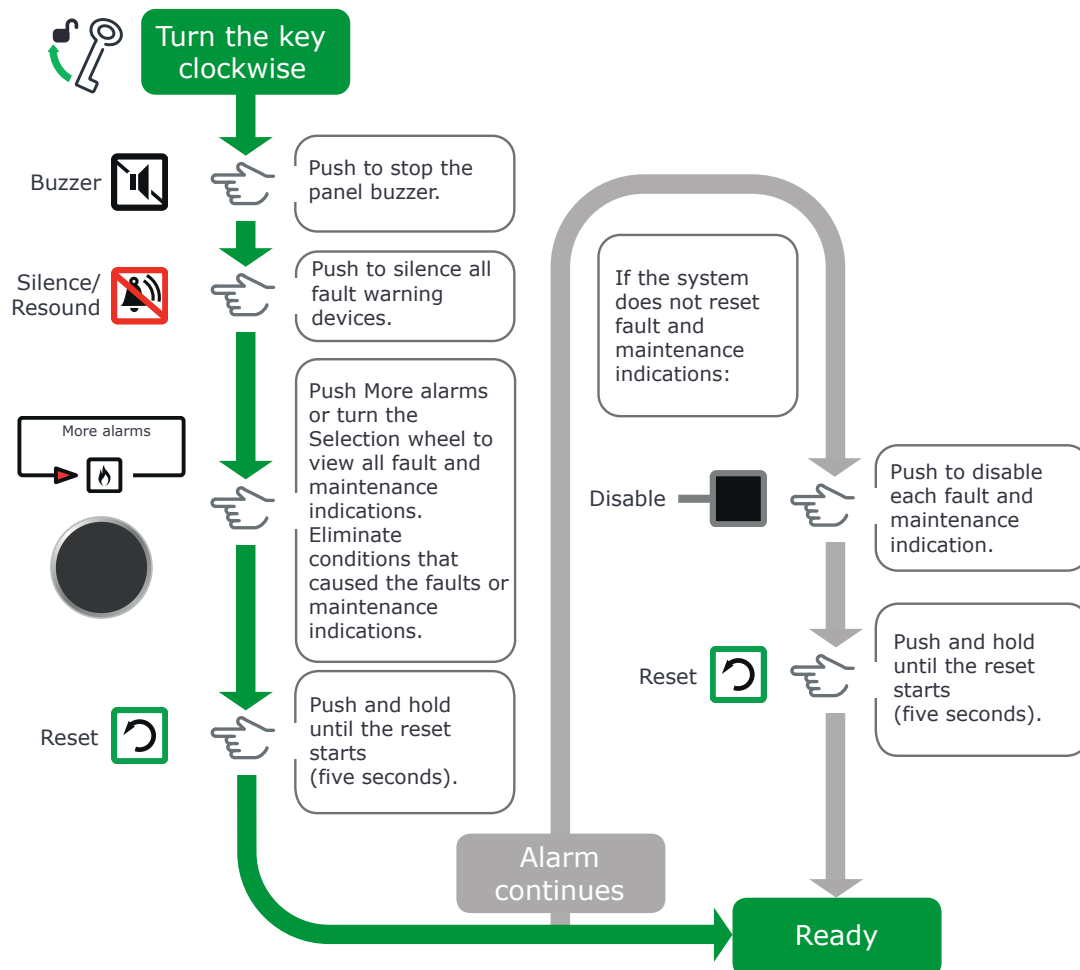

FDP Fire Detection Panel

User Manual

How to disable/enable functions




If you disable certain functions, fire alarms may be disabled.




Disable alarms only temporarily.

To Disable/Enable functions:

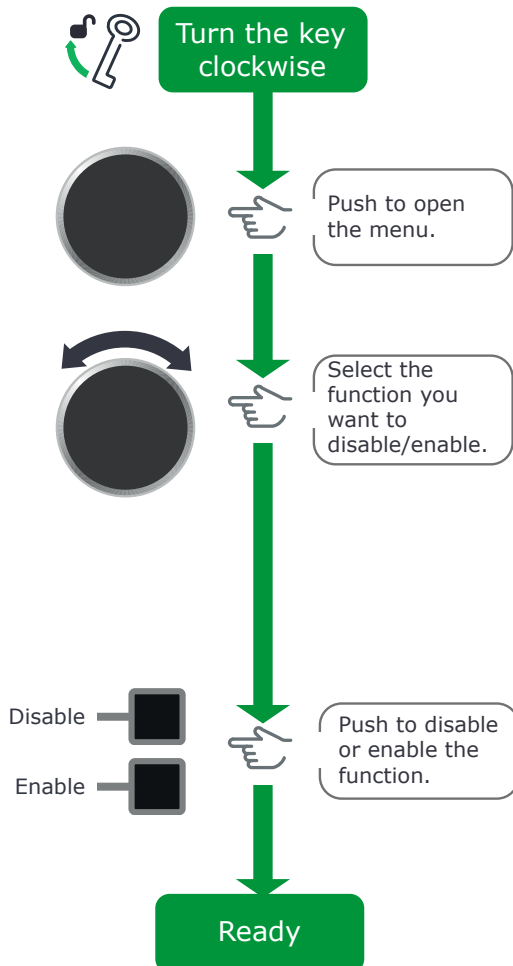

If there are active disablements, the DISABLEMENT LED is lit.

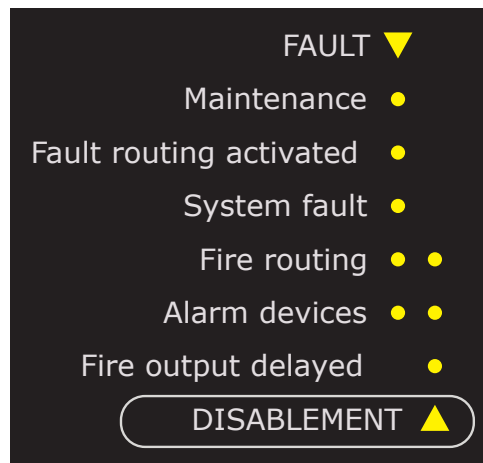


To view or enable active disablements, go to
> Menu
> Events
> Active disablements
To enable a function, push Enable.


FDP Fire Detection Panel

User Manual

How to run tests

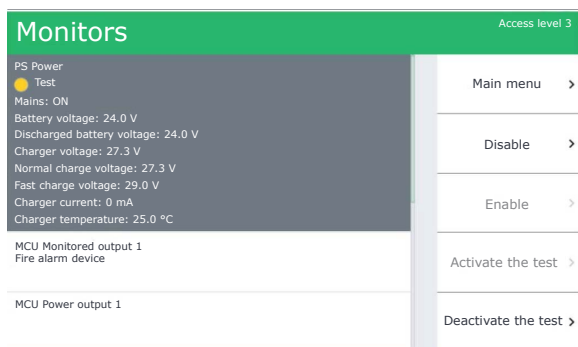

To test functions:

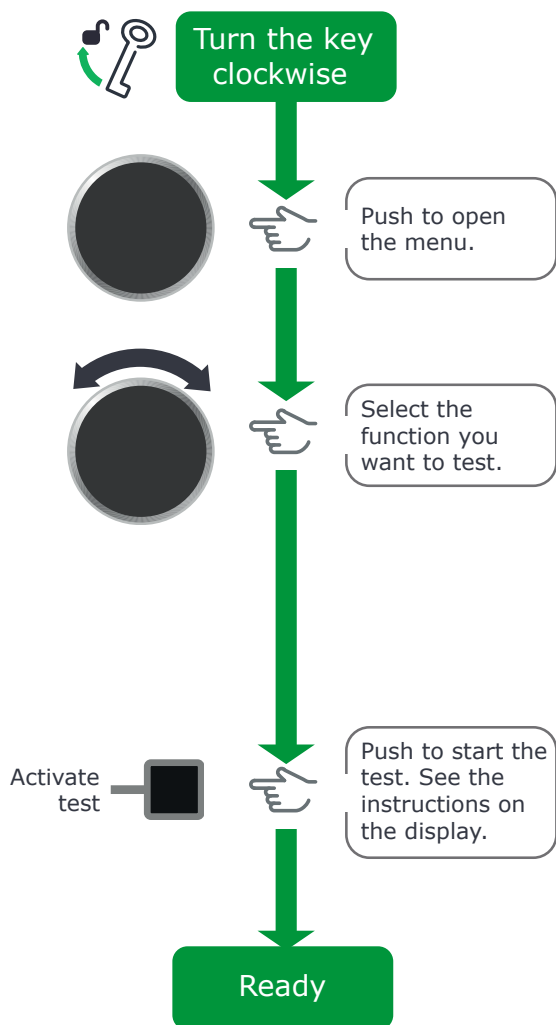

If there are active tests, the Test LED is lit.

- Power supply
- Battery use
- Evacuation
- Technical alarm
- **Test**
- Day mode
- 1
- 2




To view or stop active tests, go to
 > Menu
 > Tests
 > Active tests
 To stop a test, push Deactivate test.


FDP Fire Detection Panel

User Manual

User and Access levels

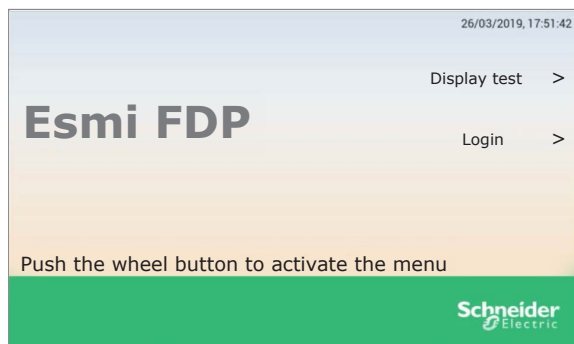

You can see the Login text on the right all the time, also while browsing in the menu.

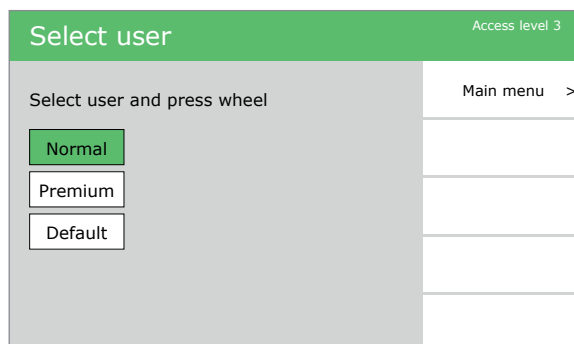

In the Main menu, push the Login soft key on the right to access the Select user view. Select the user type:

- Normal
- Premium
- Default

Normal:


The login and logout information of the user is tracked in EcoStruxure Fire Expert. Requires a QR code password from EcoStruxure Fire Expert. The QR code is the same for Access levels 3 and 4.

Premium:

The Premium user has additional features compared to the Normal user. Requires a QR code password from EcoStruxure Fire Expert. The QR code is the same for Access levels 3 and 4.

Default:

Local user status, no connection to EcoStruxure Fire Expert. Login and logout information is not tracked in EcoStruxure Fire Expert. No QR code password or online panel needed. Default passwords used for access levels 3 and 4. The default passwords can be changed by configuration.

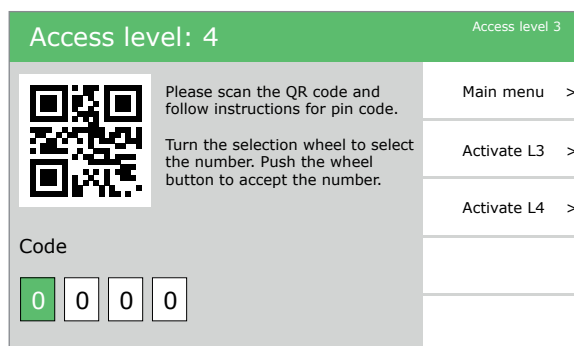

Tip: If you log in to EcoStruxure Fire Expert from your mobile device before scanning the QR code, you get the password quicker.



The default password for access level 3 is 5910.




The default password for access level 4 is 6010.

FDP Fire Detection Panel


User Manual

How to change the access level

To activate the Default user
Access level 3 or 4:

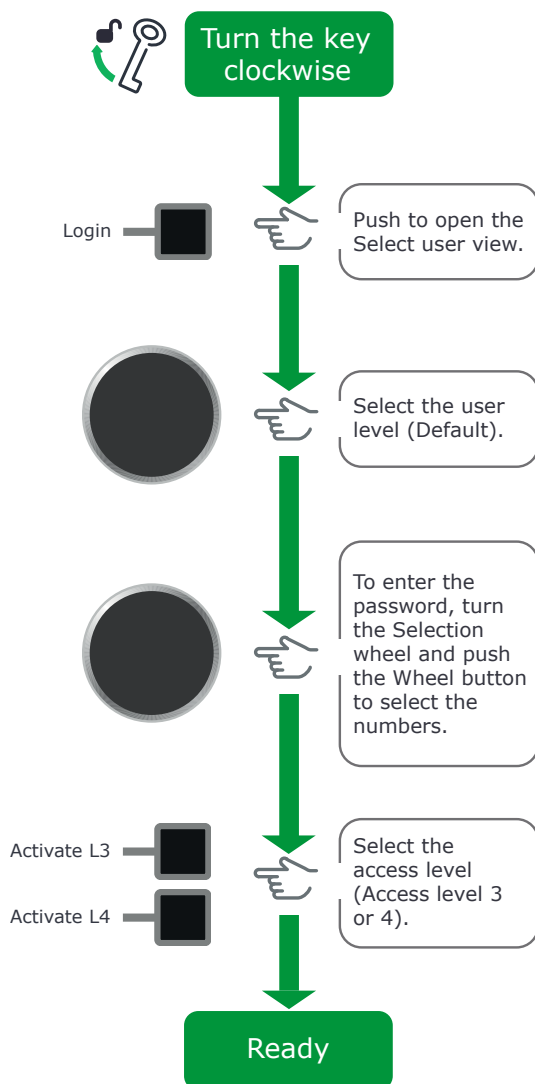

To activate the Normal or
Premium Access level 3 or 4:

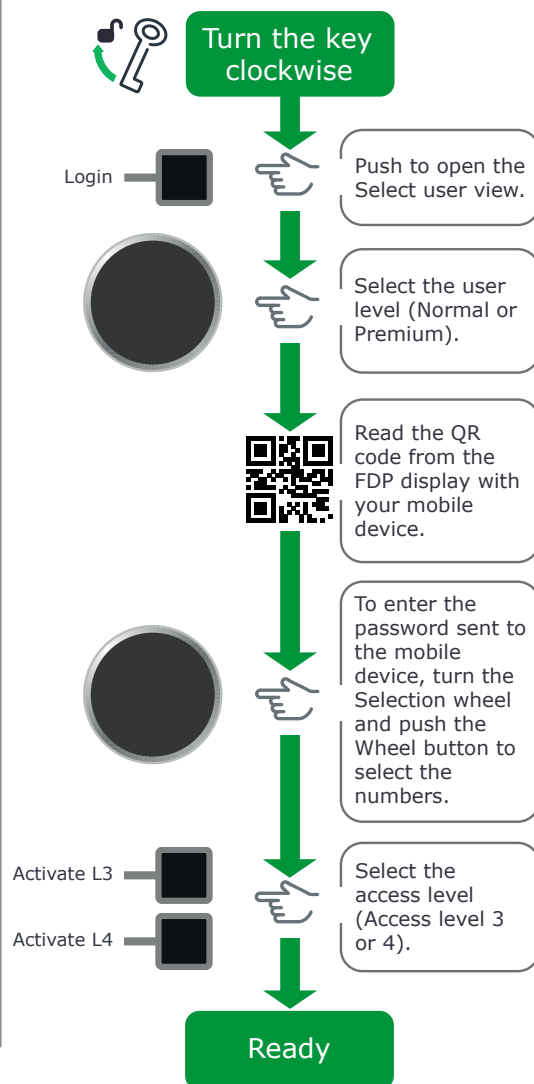

If you have logged in to Access level 3 or 4, turn the key anticlockwise to return to access level 1.

[illegible]

This image shows a blank sheet of white paper with horizontal green ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

FDP Fire Detection Panel

User Manual

FDP System

operational data

Owner of the site

Name of the site

Address of the site

Primary person responsible for the fire detection system

Telephone

Secondary person responsible for the fire detection system

Telephone

Supplier's service

Telephone

Schneider Electric Buildings AB

Mobilvägen 8
223 62 Lund
Sweden

FDP Fire Detection Panel

User Manual

FDP Fire Detection Panel

User Manual

